


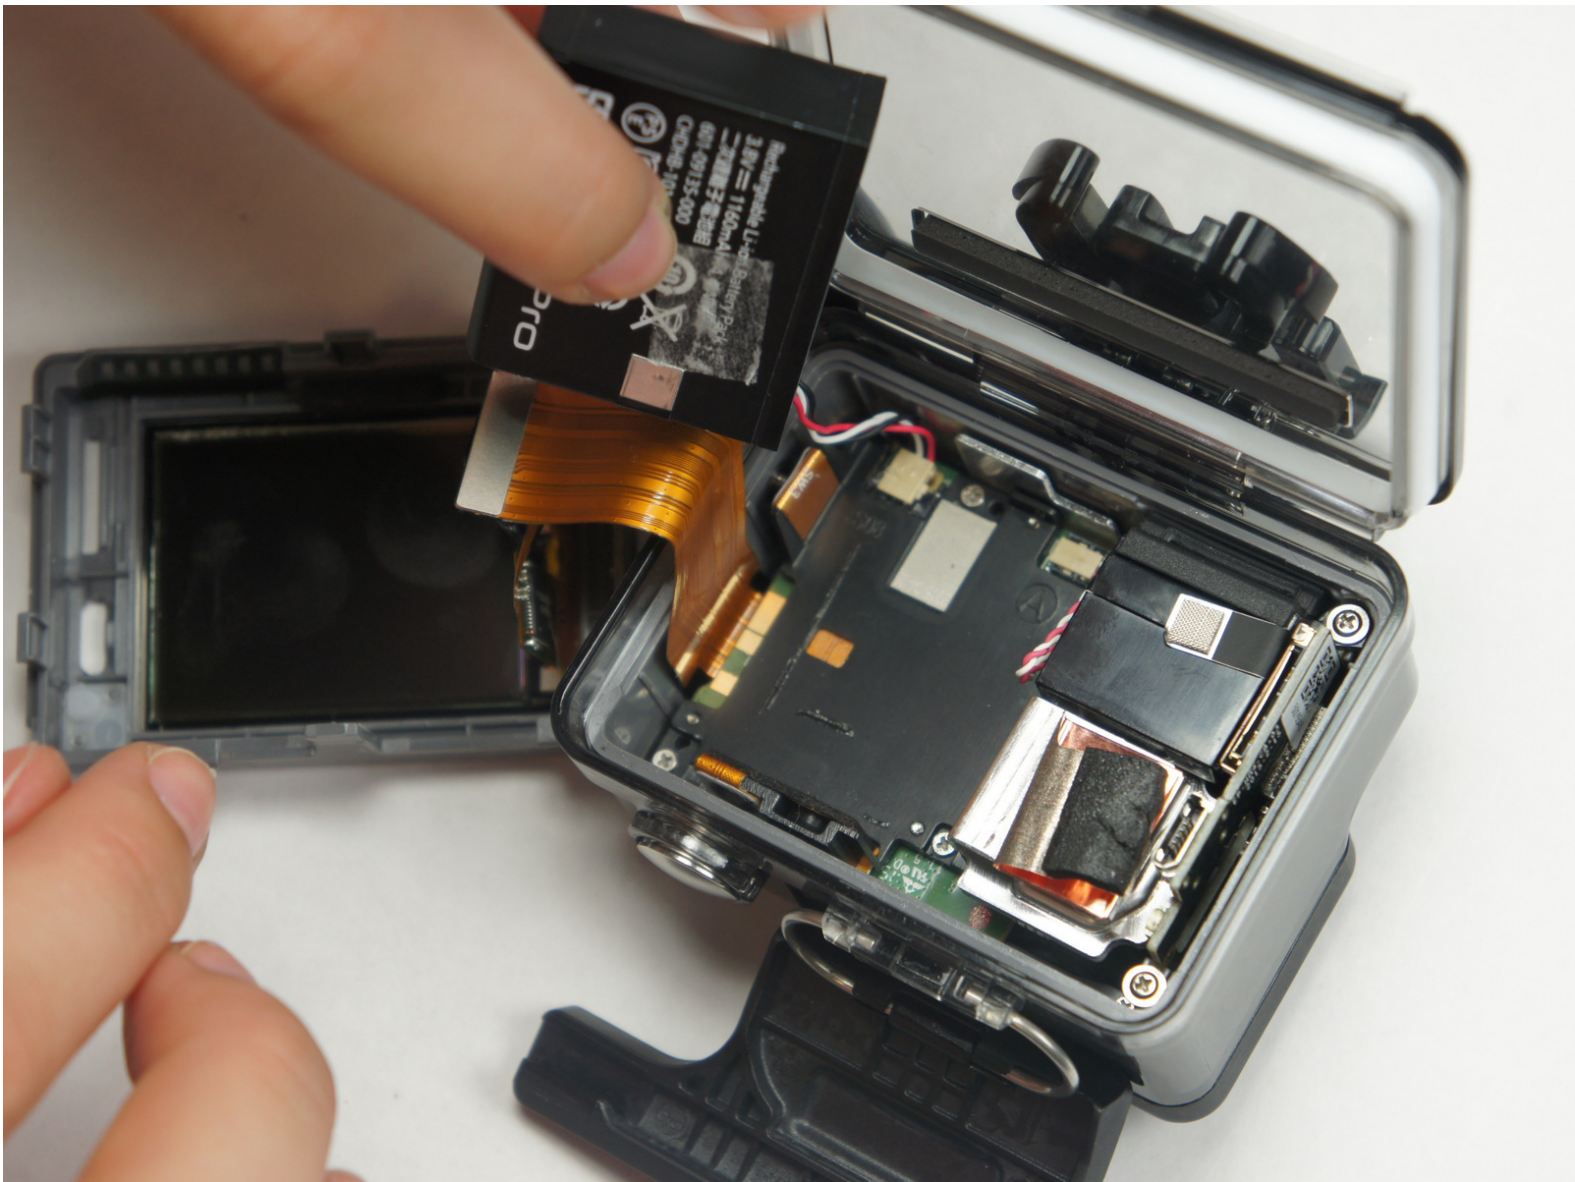

# GoPro Hero+ LCD Battery Replacement

Replace the battery on your GoPro Hero+ LCD.

Written By: Kyle



## INTRODUCTION

The battery is connected to the motherboard with a few wires. Be sure to be careful when removing the battery to not damage the motherboard or the battery.

---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Metal Spudger Set](#) (1)
-



## Step 1 — Back Panel



 Be sure to power off the GoPro before you start disassembly.

- Pop up and pull back on the clip to remove the screen cover and expose the back panel with the touchscreen.



## Step 2

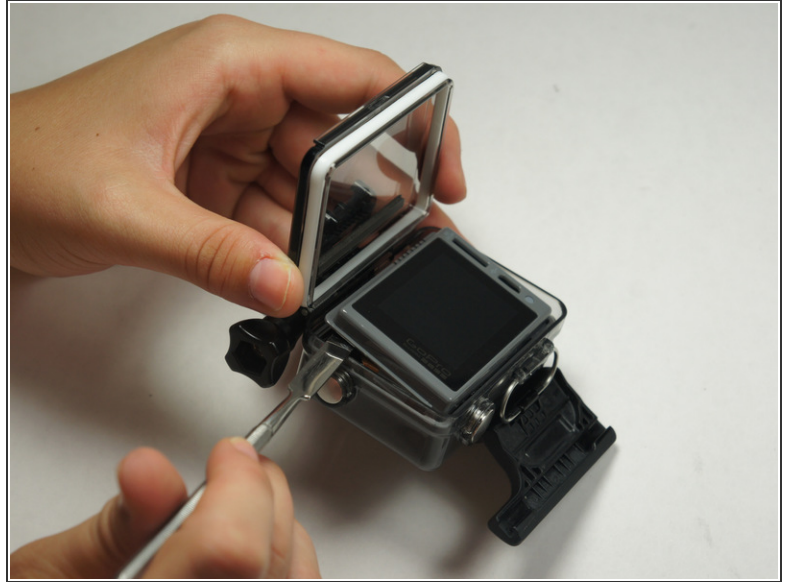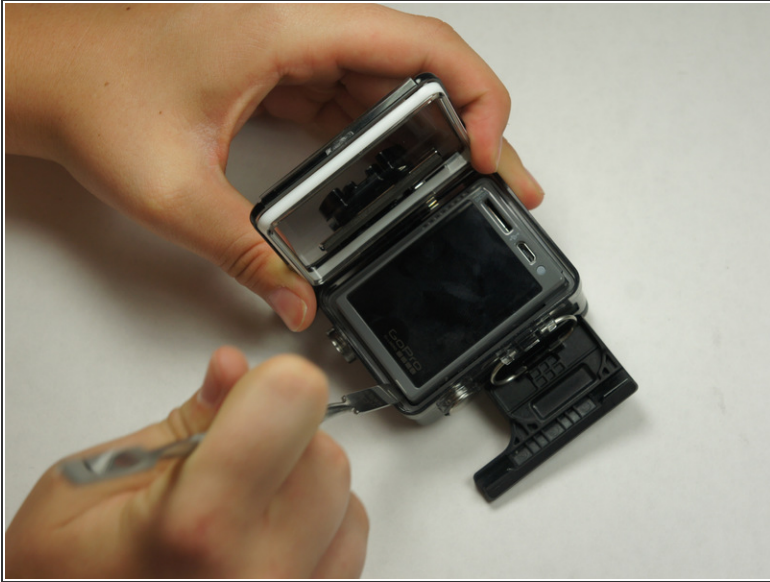

- Use the metal spudger to pry around the perimeter of the panel.
- Pry the panel upwards by inserting the metal spudger into the corner crease between the panel and camera shell.



## Step 3

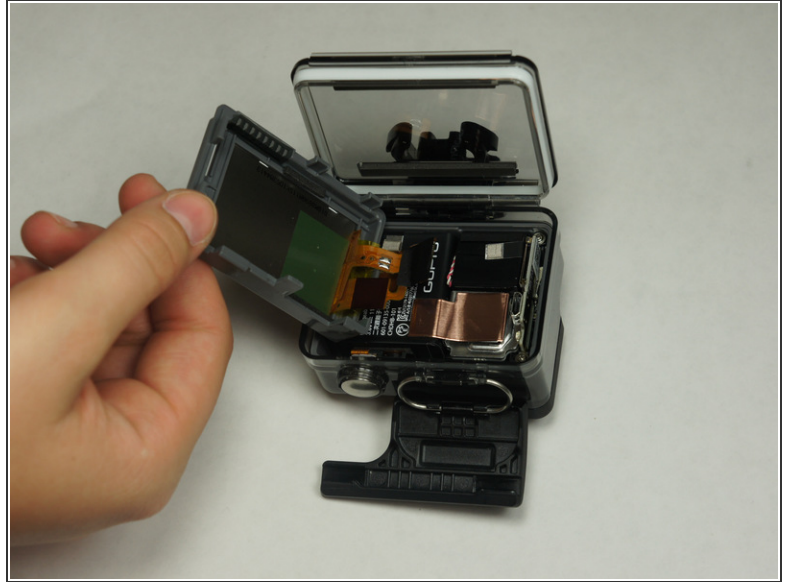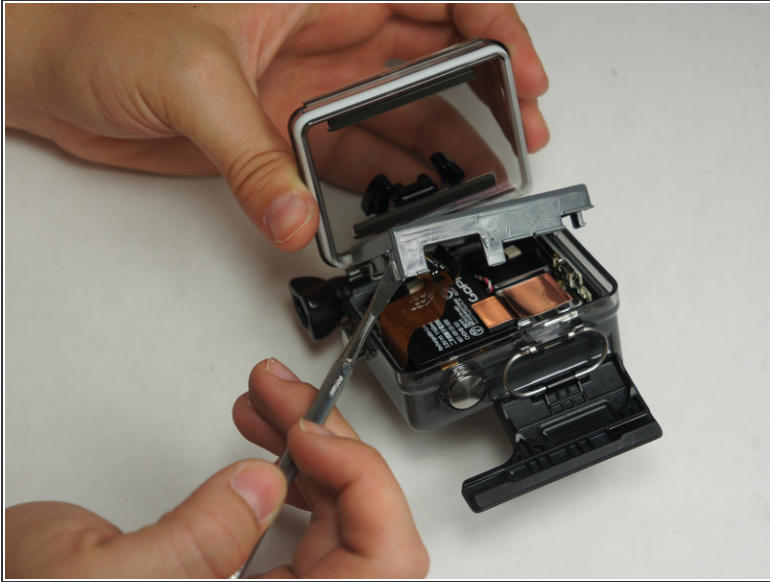

- Pry around the panel to ensure it is not attached to the device.
- Move the panel to the side so you can access the internal components.


⚠ The panel is still attached to the rest of the device with a ribbon cable, so be sure to not tear or damage the cable.

## Step 4 — Battery




- Locate the battery.
  - Peel back the rear panel ribbon cable that is adhered to the battery until it is completely separated from the battery.
- ⚠ Be careful of metal contacts on strip, they can be sharp.

## Step 5

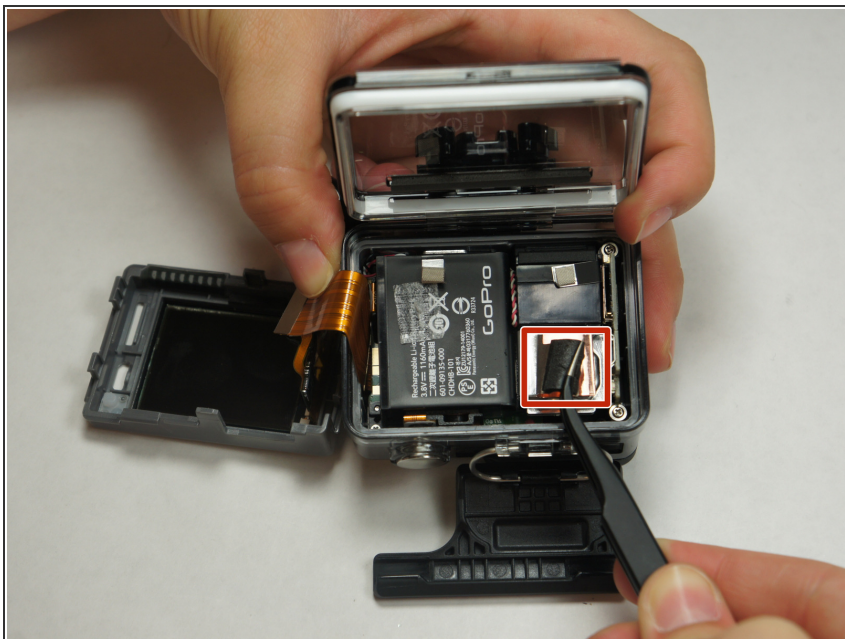

- Using tweezers, peel off the copper tape on the right side of the battery.


## Step 6

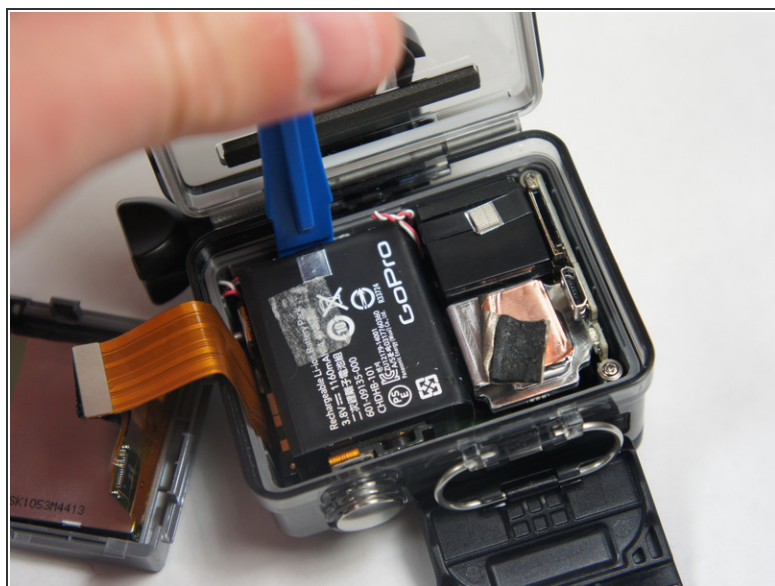

- Place the plastic opening tool at one of the edges of the battery then pry until the battery is removed from the GoPro.



## Step 7

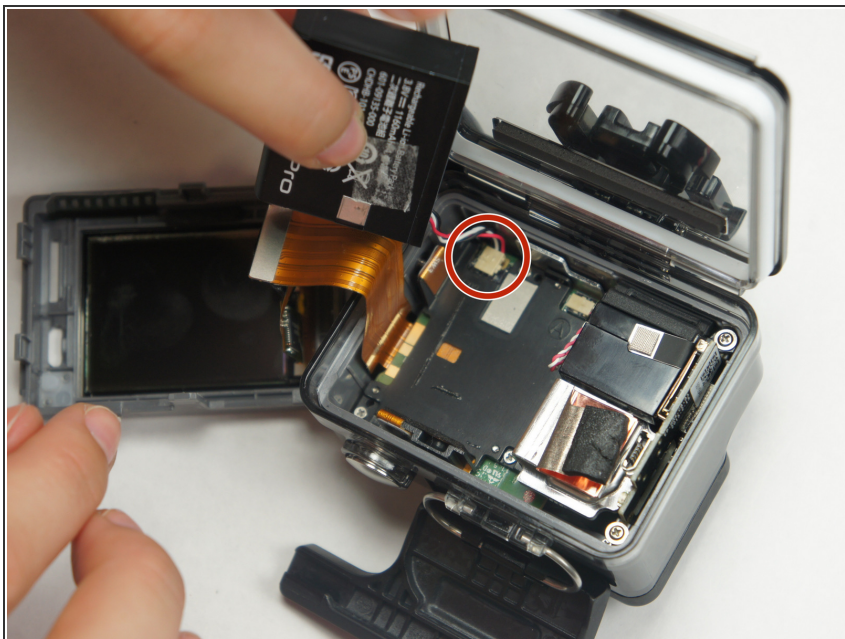

- Use a pair of tweezers to disconnect the battery connector from the motherboard.
- Gently pull the battery off the motherboard. Pulling vertically off the motherboard will give a clean release.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 10:35:40 AM.